


XTreme-EFIS

General Connection Diagram (Airtalk/Optical RDAC)

English 1.00

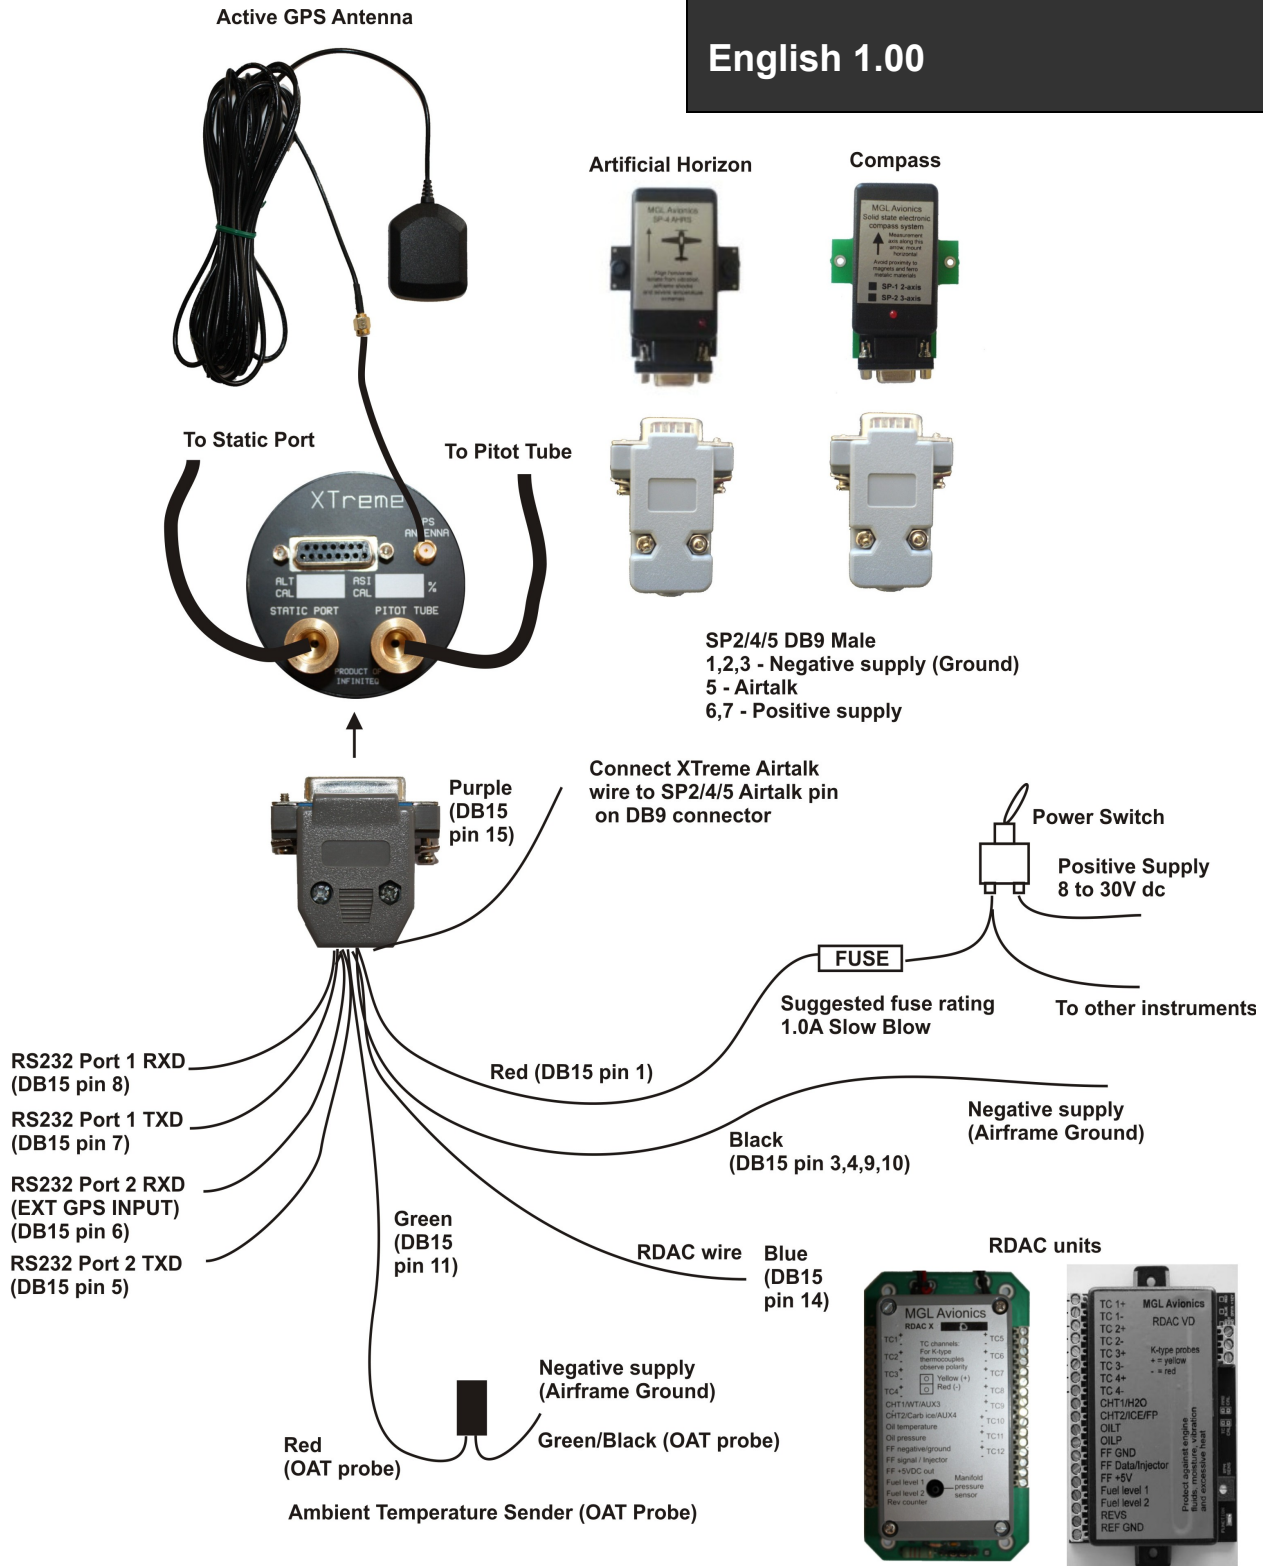

The use of an external 1A fuse is recommended. Connect the supply terminals to your aircraft's power supply. The XTreme can be used on both 12V and 24V without the use of any pre-regulators. Ensure that the supply voltage will not drop below 8V during operation as this may result in incorrect readings.

Please see MGL Avionics SP2,SP4/SP5 and RDAC documentation for installation and usage.